


# How to Send SMS

TW-EAV510 Series can support to send SMS when plug in the 3G/LTE dongle. You can access to the SMS sending page by two ways below.

## Note:

The SIM card must support SMS service and it also depends on dongle you use, some of dongles may not support SMS when data connection is up.

1. Login to WEB GUI by using admin account and go to Advanced Setup -> 3G/LTE -> Send SMS. The administrator account can send SMS directly without password protection.

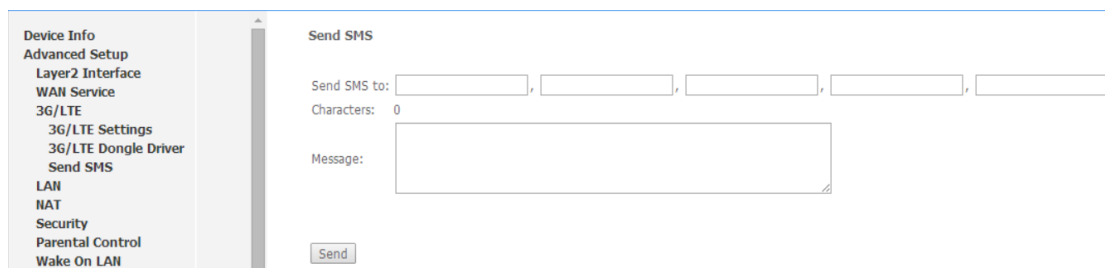

2. Type URL address directly to access to Send SMS page.

URL: <http://192.168.0.254/sendsms.html>



This page doesn't require the login, but you must enter the password correctly to send SMS.

The password setting for SMS can be found at Management -> SMS Control -> SMS User. Enter the password you want and click Apply/Save button to save configuration.

## SMS User

Password:

Apply/Save