## TeleWell TW-EAV510 series "USB printer guide"

- 1. Plug USB printer=Canono MX320
- 2. Check GUI in Site contents>Advance>Print Server



3. In PC. Control Panel >Devices and Printers



4. Add a printer.

R			Devices an	id Printers				
€	🚓 🕨 Control Panel 🔸	All Control Panel Item	ns → Devices and Printe	ers	Ŷ	Ċ	Search Devices and Printers	Q
ile Edit View	Tools Help							
Add a device	Add a printer						<b>E *</b>	
/indows can displa	ay enhanced device icon	s and information from	the Internet. Click to cl	hange				
Devices (2)								
a think								
27								
2.4G Receiver	PC_GATEWAY							
Printers (5)								
17	17	1	17					
Fax	Professional	Professional	Document Writer	(Desktop)				
	M1210 MFP Series Fax	M1212nf MFP						

5. Select "The printer that I want isn't listed."

Printer Name	Address
	Con Con

6. Input http://192.168.0.254:631/printers/Ip0



7. Select Cannon MX 320 series.

Select the manufacture an installation disk, of printer documentation	urer and model of your printer. If your printe lick Have Disk. If your printer is not listed, n for a compatible printer.	r came with consult your
Manufacturer 🛆	Printers	^
Brother	Canon Inkjet MP640 series	_
Canon Dell	Canon Inkjet MP830 series	
Fastman Kodak Company	Canon Inkjet MX320 series	
	Canon Inkiet MX330 series	*
This driver is digitally signe Tell me why driver signing	d. Windows Update H	ave Disk

8. Press Next when you see success message.

📀 🖷 Add Printer	r	×
You've succes	ssfully added lp0 on http://192.168.0.254:631	
Printer name:	lp0 on http://192.168.0.254:631	
This printer has be	een installed with the Canon Inkjet MX320 series driver.	
	Next	Cancel

## 9. Press "Finish".

	×
😸 🖶 Add Printer	
You've successfully added lp0 on http://192.168.0.254:631	
To check if your printer is working properly, or to see troubleshooting information for the printer, pri test page. Print a test page	nt a
Finish Car	ncel

10. Then you can execute printer now.

