TW-LTE ROUTER: PUREVPN-CLIENT (PPTP)

Firmware version has to be 29.0.29-4 or newer

Create your PureVpn account on the page purevpn.com

When the account has created and TW-LTE router has be used as a PureVPN client, add the account settings to TeleWell router PPTP client side

Login to the web management of device 192.168.0.254 (hallinta / saimaa)

Select VPN / Client -> add your account settings

Name: Name of the setting

Enable: Enabled **Type:** PPTP

Local Gateway Interface: Used interface (in example 3G/LTE)

Remote Gateway: Used PureVPN server (check the right server from purevpn.com)

Username: Your PureVPN username **Password:** Your PureVPN password **Connection type:** Remote access

Default Gateway: Enabled, then PureVPN is default route

Click Add

Configure Client	
Name	purevpn
Enable	
Туре	●PPTP ○L2TP
Local Gateway Interface	3G/LTE ∨
Remote Gateway	fi1.purevpn.net
Username	pure
Password	•••••
Connection Type	Remote Access
Default Gateway	
Maximum rule count: 4) Add Edit Cancel	
Client	
Delete Edit Name Enable Type	Local Gateway Interface Remote Gateway Username Connection Type Peer IP Peer Netmask


Then choose Internet settings / LAN / LAN

Primary DNS server: 8.8.8.8 Secondary DNS server: 4.4.4.4

Click Apply


Local Area Network (LAN) Settings

You may enable/disable networking functions and configure their parameters as your wish.

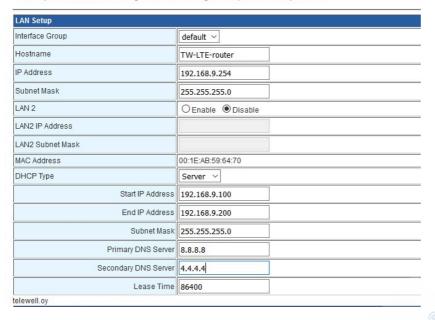

If there is in use LTE/4G/3G connection, select Internet settings / WAN / 3G/LTE and change MTU as 1360 or 1424 (which one works better)

3G/LTE

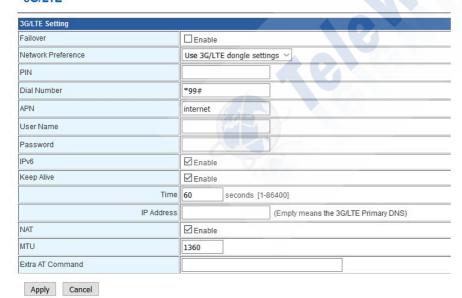

From Information / VPN / Client info can see when VPN connection is connected