

TW-EA515 (b) / TW-WLAN router:

NAS configuration

NAS > Disk Utility

1. Format

This utility would format the certain partition.

Please be noted! This action will clear all your data in this partition. You will not be able to recover it any more.

Disk Distribution

▶Disk Total Capacity 8075 ? MB

Partition	Free(MB)	Used(MB)	Total(MB)
1 [FAT32]	1918	5767	7686

*Warning! Formatting will erase all data on this partition.

2. Check

This utility could help you check the partition, find the lost files, try to fix some problems.

NAS > File Sharing > Basic Setting

Basic Setting

▶Computer Name	<input type="text" value="NAS"/>
▶WorkGroup	<input type="text" value="WORKGROUP"/>
▶Server Comment	<input type="text" value="samba server"/>

These settings are for Samba Server (Windows Network Neighbors).

- 1. Computer Name**
The name that is showed on the windows network neighbors search result.
- 2. WorkGroup**
This name MUST be the same as your computer, or you could not search this device via windows.
- 3. Server Comment**
Just a comment for recognize.

NAS > File Sharing > FTP Service

FTP Setting

▶ FTP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
▶ FTP Port	<input type="text" value="21"/>
▶ FTP Max Connection per IP	<input type="text" value="2"/>
▶ FTP MAX Clients	<input type="text" value="5"/>
▶ Client Support UTF8	<input type="radio"/> Yes <input checked="" type="radio"/> No
▶ Codepage	<input type="text" value="Arabic(CP864)"/>

These settings are for FTP service.

- 1. FTP Port:**
The default port is 21, but sometimes you might want to hide your FTP service by changing it. We have the ability to receive the request on non-standard FTP port, but please be noted, some NAT router could not support non-standard FTP port, that means some of your clients might have to use passive mode to get file.
- 2. Client Support UTF8:**
This option is used when your FTP client could support UTF8. Usually, the default value "No" is okay for most clients.
- 3. Codepage:**
Please set correct value to suit your language.

NAS > File Sharing > Access Control

User Access Configuration

▶ Security Level	<input type="radio"/> Guest mode <input checked="" type="radio"/> Authorization mode
------------------	--

The default setting is "Guest mode", all clients could access as anonymous users.

If you want to control the permission, change to "Authorization mode" and save it, then go to "User Configuration".

NAS > File Sharing > User Configuration

User Access Configuration

▶Username	<input type="text"/>	(Max. 20 users)	
▶Password	<input type="password"/>		
ID	User name	Password	Select
<input type="button" value="Add"/>	<input type="button" value="Delete"/>	<input type="button" value="Cancel"/>	<input type="button" value="Back"/>

In this page, you can manage the user account.

Key in the user name and password then press "Add" could let you add a new user.

If you want to delete an account, select it and click "Delete" button.

NAS > Download Assistant

NAS > Download Assistant > FTP

If you want to download something from a FTP site regularly but you don't want to spend time on remembering doing this, this FTP download assistant could help you.

Download Assistant - FTP

▶Download Type	<input checked="" type="radio"/> FTP <input type="radio"/> HTTP <input type="radio"/> BT <input type="radio"/> eMule
▶Job Name	<input type="text"/>
▶URL	<input type="text"/> Port <input type="text" value="21"/>
▶Save To	<input type="text" value="/C/Downloads/FTP"/>
▶Login method	<input checked="" type="radio"/> Anonymous <input type="radio"/> Account
▶Username	<input type="password"/>
▶Password	<input type="password"/>
▶Start Time	<input type="radio"/> Schedule <input checked="" type="radio"/> At Once
Time	<input type="text" value="2011"/> / <input type="text" value="Apr"/> / <input type="text" value="01"/> - <input type="text" value="16"/> : <input type="text" value="40"/>

*When you use the download service of FTP, HTTP, BT, or eMule, please check if these files you downloaded are legal or not.

<input type="button" value="E-mail Alert Configuration"/>	<input type="button" value="Save"/>	<input type="button" value="Undo"/>
---	-------------------------------------	-------------------------------------

1. Job Name:

It's for you to remember the job easily, and the device would use this name to info you when the job is done.

2. URL:

The URL for the file you want to download.

You have to use this format:

IP/path/file, you don't have to add protocol part such like "ftp://".

3. Save To:

The destination path on USB disk that you want to save files.

Default value is /C/Download/FTP

4. Login method:

Anonymous, you can access this site without any authentication

Account, you have to enter the username and password to login.

5. Start Time:

Schedule: this device will start FTP download on the time that you specified. The schedule job that is saved could be check on Status page by selecting "View Scheduled Download Status".
At Once: the FTP download would be started immediately.

NAS > Download Assistant> HTTP

Download Assistant - HTTP

▶Download Type FTP HTTP BT eMule

▶Job Name

▶URL

▶Save To

▶Start Time Schedule At Once

Time / / - :

**When you use the download service of FTP, HTTP, BT, or eMule, please check if these files you downloaded are legal or not.*

1. Job Name:

It's for you to remember the job easily, and the device would use this name to info you when the job is done.

2. URL:

The URL for the file you want to download.

You have to use this format:

IP/path/file, you don't have to add protocol part such like "http://".

3. Save To:

The destination path on USB disk that you want to save files.

Default value is /C/Download/HTTP

4. Start Time:

Schedule: this device will start FTP download on the time that you specified. The schedule job that is saved could be check on Status page by selecting "View Scheduled Download Status".

At Once: the FTP download would be started immediately.

NAS > Download Assistant > BT

Download Assistant - BitTorrent

▶Download Type FTP HTTP BT eMule

[Open](#) [Remove](#) | [Pause](#) [Resume](#) | [Pause All](#) [Resume All](#) [Filter](#) [Inspector](#)

0 Transfers ↓ 0 bytes/s ↑ 0 bytes/s


All Downloading Seeding Paused Queued

NAS > Download Assistant > BT > Start BT download

First, you have to get a seed file, which we called "torrent". Then click the "Open" link on UI, it would pop up a sub menu to let you upload.

Or, if your torrent file could be download from network, you could just enter a URL.

Download Assistant - BitTorrent

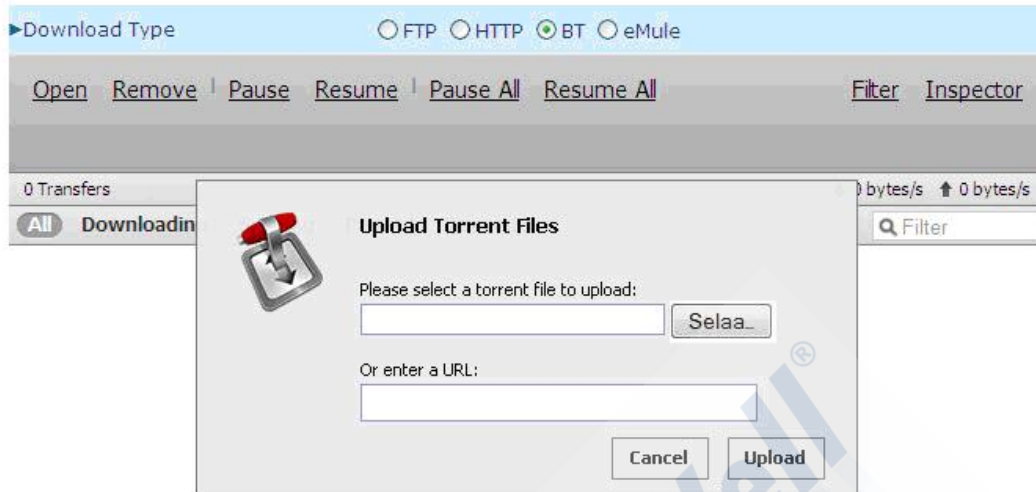


NAS > Download Assistant > BT > BT download status

After you upload the torrent, download job would be started immediately.

The device could support 3 concurrent download jobs; other jobs would wait in job queue. If one of the three running job is done, the next new job would be started.


At this page, you could see the download process and the bandwidth.

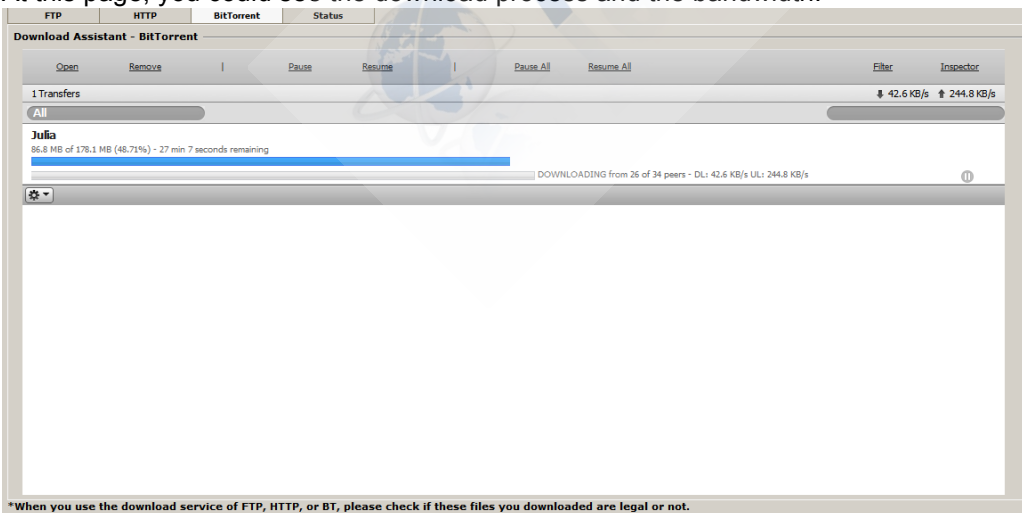

NAS > Download Assistant > BT > Stop, Resume and Remove seed

Select any job on the list, and click right button of mouse, you could see a menu with several actions you could do.

You could Stop (Pause), Resume, or Remove a job with this sub menu.

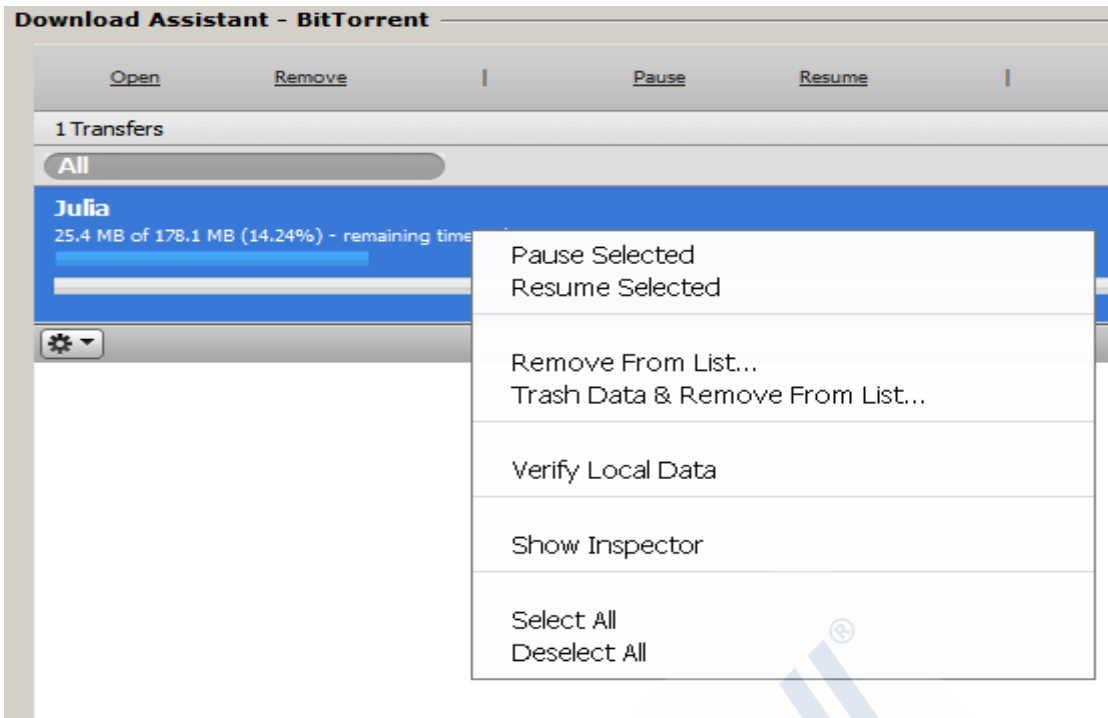

NAS > Download Status

Download Assistant - Job List

There are **0** download jobs in the list.

►View Download Status

Page 1

Type	Name	Status
<input type="button" value="Pause"/>	<input type="button" value="Delete"/>	<input type="button" value="Resume"/>
<input type="button" value="Start Now"/>		
<input type="button" value="Refresh"/>	<input type="button" value="Log"/>	

At this page, you could check the download jobs of HTTP and FTP.

How to access data on the NAS?


Windows User

NAS > By network place

Then start your “file manager”, type the IP with “\\” on the beginning, as follow picture shown. Then press enter.




You could find a folder named “Storage”. It is what you are looking for.

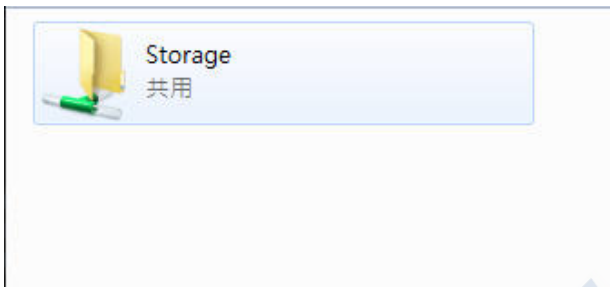

NAS > By Web HDD

This Web HDD can allow you to enter HDD by web UI, and also can allow you to let ‘guest’ to enter the ‘public’ area only.

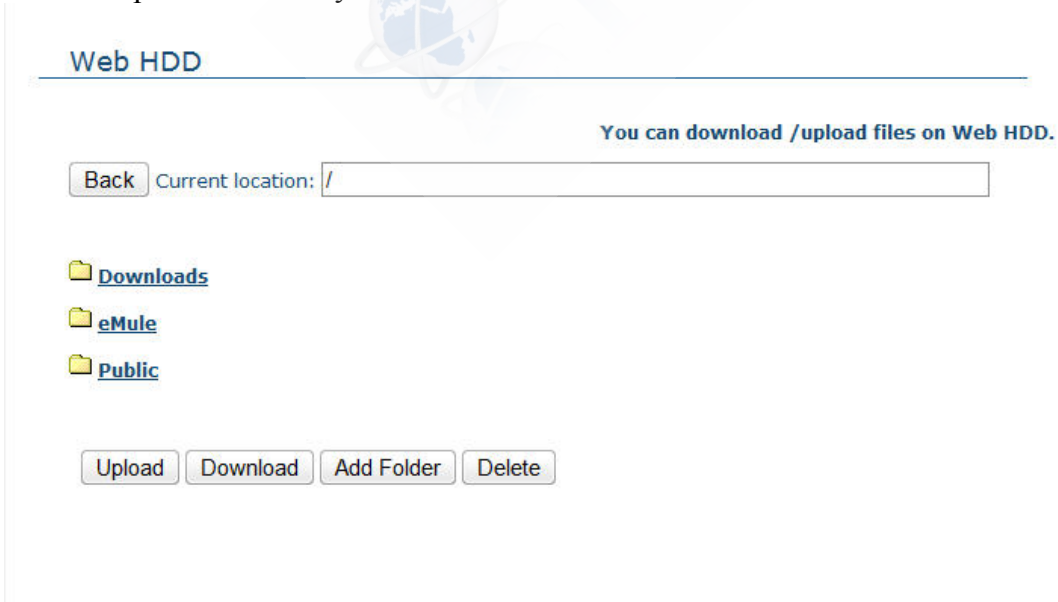

Unix User

We do not provide NFS support, so the only way for UNIX to get files is FTP.

Use your FTP client to connect the FTP server.